
# **Over-center valves type LHK**

with hydraulic release





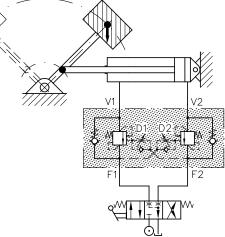

Example: Type LHK 33 G - 11 - 230 for single-sided load direction, see section 2.1 Example: Type LHK 33 G - 21 - 320/320 for alternating load directions (like example circuitry), see section 2.2

### 1. General

The units included in the pressure valve group in accordance with DIN ISO 1219-1 prevent double-acting consumers (hydraulic cylinders, hydraulic motors) with an attached, pulling or pushing load from moving uncontrollably at high speeds (acceleration), when moving in the load direction that corresponds to the oil inflow (pump) (stalling, oil column torn free).

**Example:** Any type of lifting and swiveling equipment with change of direction (swiveling over dead point). Cable winch and swing gear motors.

As a side-effect of this, when the directional control valves or directional spool valves are in the neutral position, there is protection against undesired or unauthorized movements of a hydraulic cylinder's piston in the load direction if the directional spool valve controllers are contaminated with leaked oil in the stop position. See section 5.4 for details.

**Example:** Lifting and push-out cylinders, rotating piston rods and steering racks/pinion swivel cylinder.

Use also possible as relievable servo valves (pressure back valves) for special applications.

**Example:** For feed cylinders in machine tools, for stamping cylinders in fixtures, in hydraulic synchronizers if the synchronism or parallel working of two hydraulic cylinders is maintained with two equal part delivery currents of the pump etc., also see section 5.3.

See D 7381 for details of other synchronized control operations using flow dividers type TQ.

The over center valves type LHK are intended for all kind of turning, swiveling or rotating devices etc. which are sufficiently stiff and therefore show only a low tendency for occilations.

For application that heavily tend to low frequent oscillations, especially when used together with prop. control type PSL / PSV acc. to D 7700 ++ , type LHDV acc. to D 7770 or type LHT acc. to D 7918 should be used.

The outlet side (return side) of the hydraulic consumer, referred to the load and movement direction, is preloaded with the load holding valve. Depending on requirements, the pressure setting can be selected approx.15 ... 25% higher than the highest possible load pressure. When hydraulic cylinders are in the resting state, the good sealing properties ensure that leaking oil from the consumer side cannot travel to a directional spool valve. The good sealing properties also make sure that the load cannot overcome the pre-load pressure or back press, of the valve.

If the hydraulic consumer is set in the "lower load" direction via the directional control valve, the load cannot set the consumer in motion itself due to the back pressure on the load holding valve (see previous paragraph). Rather, the pump must "push" on the consumer inflow side. The pressure required for this acts on the unlocking piston in the load holding valve via a control line. The force of the piston is directed against the spring pre-load. This reduces the pressure setting to load pressure. The valve is brought into a throttle operating position (unlocked) and movement of the consumer begins. The pressure on the pump side for moving the load depends on the difference between the set pressure value in the over-center valves and the current load pressure. It also depends on the area ratio in the hydraulic consumer and on the unlocking ratio in the over-center valves. It is only a fraction of the set pressure.

When the consumer is triggered, the valve quickly opens the outlet side so that no pressure intensification can occur and then goes over damped into the load-dependent throttle position. Starting jumps on consumers and associated pitching of the components moved by them are thereby largely suppressed just as they start or quickly die out. This starting behavior is achieved by way of threaded throttles with bypass check valves in the internal control channels. The effectiveness of the threaded throttles can be changes within a certain range and adapted to local requirements.

For additional notes regarding function and application see sect. 5.1



HAWE HYDRAULIK SE STREITFELDSTR. 25 • 81673 MÜNCHEN

September 2007-08

2.3

<b>2.</b> 2.1	Val		LHK 22 G - 1 LHK 33 G - 1	d direction V $\rightarrow$ F 1H - 180 5C - 250/ <u>220</u>			versions, see	arding the use of the sect. 5 on of old and new type	
Table 1	1:		LHK 44 F - 1	<u>4W</u> - <u>200</u>	Pressure set	ting shock va	lve $p_2$ (bar) <sup>2</sup> ),	4)	
					Pressure set	ting over-cen	ter valve p <sub>1</sub> (bai	r) <sup>1</sup> ), <sup>4</sup> )	
Basic ty size	l ype,	Dampening characteristic	Symbol and connection m	ode	Relief ratio	Flow approx. (lpm)	Pressure range p <sub>1</sub> (bar) <sup>1</sup> )	Port thread ISO 228/1 (BSPP) F/V, R, A, B <sup>3</sup> )	Dimen- sional drawin
LHK 2	21	G	-14 -14 T	Ding composition			50200	G 1/4	7
			-14 T-3/8	Pipe connection	1 : 4.6	15	50200	G 3/8	6
			-11	Pipe connection			201400		1
		G	-11 H	V - banjo bold				G 3/8	2
LHK 2	22	F	F -11 H16 connection		1 : 4.6		50200	M 16x1.5 / G 3/8	2
		0	-11 K -11 P	V - manifold mounting		20	201400		4
LHK 2	227	G F	-11 K	V - manifold mounting	1:7			G 3/8	5
LHK 3	30	G F	-11 PV -11 C PV	Manifold mounting, external pressure adjustment	1:4.4	60	60130 131320 321360		3
LHK 3	32	G F U	-11	Pipe connection	1 : 4.4	40	60130 131320	G 3/8	1
LHK 3	33		-11 -11 C	Pipe connection					1
			-11 H	V - banjo bold connection					2
		G F U	-11 K -11 P	V - manifold mounting				G 1/2	4
		Ū	-14 -14 W	Pipe connection	1:4.4	60	60130 131320	0.172	7
			-15 <sup>2</sup> ) -15C <sup>2</sup> )	Pipe connection			321360		9
			-17 OMR -17 OMT -17 OMV	V - manifold mounting					10/11
LHK 3	333		-17 OMV	V - manifold mounting	1:3	_			4
		G F	-11	Pipe connection		_			1
LHK 3	337	U	-11 K -11 P	V - manifold mounting	1:7				4
LHK 4	10	G F	-11 PV -11 C PV	Manifold mounting, external pressure adjustment	1:4.4	100			3
LHK 4	13	G F	-14	Pipe connection	1:4.4	80		G 3/4 / G 1/2	7
			-11 -11 C	Pipe connection			0159 160350		1
LHK 4	14	G	-11 P	V - manifold mounting					4
		F U	-14 -14 W	Pipe connection	1:4.4	100		G 3/4	7
			-14 W M1C	V - manifold mounting					8
			-15 <sup>2</sup> ) -15C <sup>2</sup> ) Pipe connection						9

G = Dampened via throttle/ check valve combination (adjustable throttle screw) **F** = Simple damp-U = no dampening via adjustening

----- | S


1) Various pressure ranges (pressure springs) according to the specified pressure.

<sup>2</sup>) Pressure setting for shock valve p<sub>2 max</sub> ≤ 340 bar (Pressure range: 150 ... 250 bar and 251 ... 340 bar)
<sup>3</sup>) Port thread M, S, X, Z see dimensional drawings section 4 ++

4) Set to 80% of p<sub>max</sub> of the respective pressure range, when not specified in the order

-**t** 

able throttle screw --¥--¦s

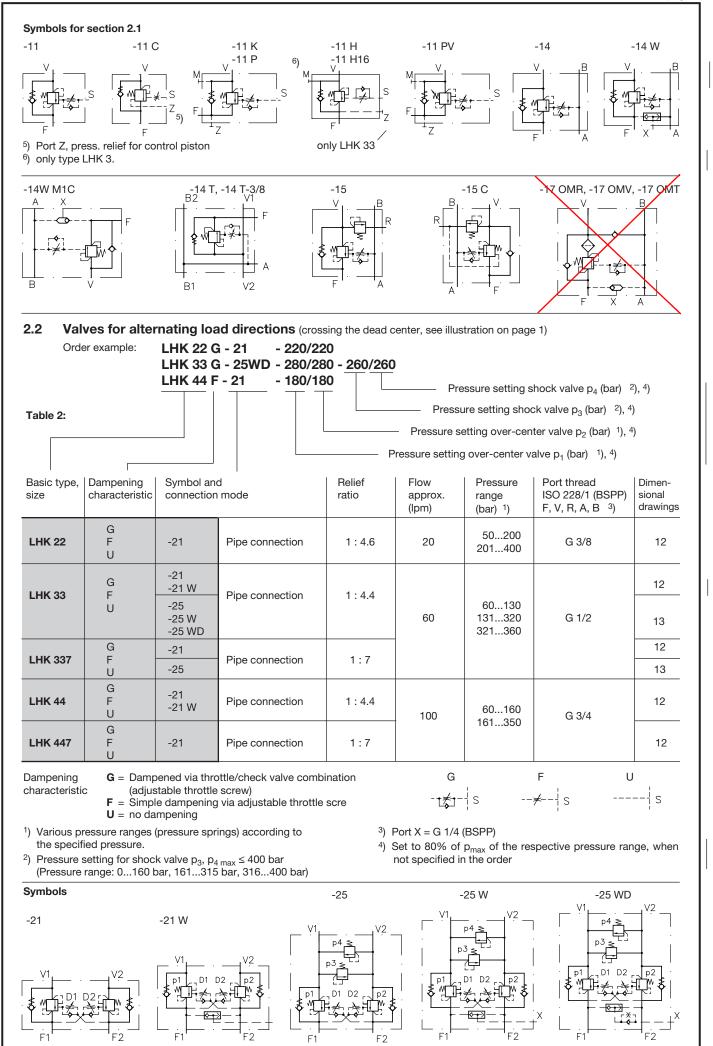

### 2.3 Over-center valve cartridges

The over-center valve cartridges are available individually for customer furnished base bodies featuring ducts V and S. Therefore function test and pressure setting have to be carried out after assembly on site. For notes regarding the adjustment, see "Pressure adjustment" in sect. 3 and sect. 4.3. A specification of the intended load pressure is necessary for a pre-selection of the pressure spring.

The restrictor check valve type FG2 (acc. to D 7275) is used best for damping the control piston (port A = control piston side, port B = control inflow).

Order example:	LHK 2 <sup>-</sup>
	LHK 30

Table 3:

LHK 21 - 180 LHK 30 V - 260 LHK 447 - 120

A specification of the intended load pressure  $p_1$  (bar) <sup>3</sup>) is necessary for a pre-selection of the pressure spring.

Basic type, size	Relief ratio	Flow approx. (lpm)	Pressure range (bar) <sup>1</sup> ), <sup>3</sup> ) P <sub>1</sub>	Port thread (BSPP)	Utilized symbol	Dimen- sional drawings
LHK 20 V		45	50200	<sup>2</sup> )		17
LHK 21		15	00200	G 1/4	14.	14
LHK 22	1 : 4.6		50200		11., 21	14
LHK 227	1:7	20	201400	G 3/8	11.	14
LHK 30 V		60	60130 131320 321360	2)	11 PV, 11 CPV	18
LHK 32	1:4.4	40	60130 131320	G 3/8	11	15
LHK 33	1. 4.4				11., 14., 15., 17., 21., 25.	15
LHK 33 S		60	60130 131320	G 1/2	11 SK	20
LHK 33 SL			321360		21 SL	15
LHK 337	1:7				11., 21, 25	15
LHK 40 V				2)	11 PV, 11 CPV	19
LHK 44	1 : 4.4	100	60130 131350	G 3/4	11., 14., 15., 21.,	16
LHK 447	1:7				21	16



Connection hole Y see dimensional drawings sect. 4.3

<sup>1</sup>) Various pressure ranges (pressure springs) according to the specified pressure.


<sup>2</sup>) All ports are in the manifold. The pressure is adjustable after loosening the lock nut.

 $^{3}\!)$  Set to 80% of  $p_{max}$  of the respective pressure range, when not specified in the order

## 3. Further data

Designation Over-center valve, with hydraulic relief, with bypass check valve								
Design	Pressure valve part (load holding valve): Bypass check valve:	Ball or cone seated valve Plate seated valve						
Mounting	Depending on type, see dimensional dra	nsional drawings in sect. 4						
Installation position	Any							
Connections	F, F1, F2; V, V1, V2; A, B and R = Main connections, depending on S, X and M = Control and measuring connections, depending on ty All connections can be loaded with full operating pressure.							
Flow direction	Operating direction (load holding functio flow $F \rightarrow V,F1 \rightarrow V1,F2 \rightarrow V2$	n) V $\rightarrow$ F, V1 $\rightarrow$ F1, V2 $\rightarrow$ F2						
Unblocking ratio	See Table 1, 2 and 3; section 2.1 to 2.3 The relief pressure is 0.23 x (set pressure - load pressure) 0.22 x (set pressure - load pressure) 0.14 x (set pressure - load pressure)	for 1 : 4.4 for 1 : 4.6 for 1 : 7						

The area ratio for hydraulic cylinders is included in the calculation.

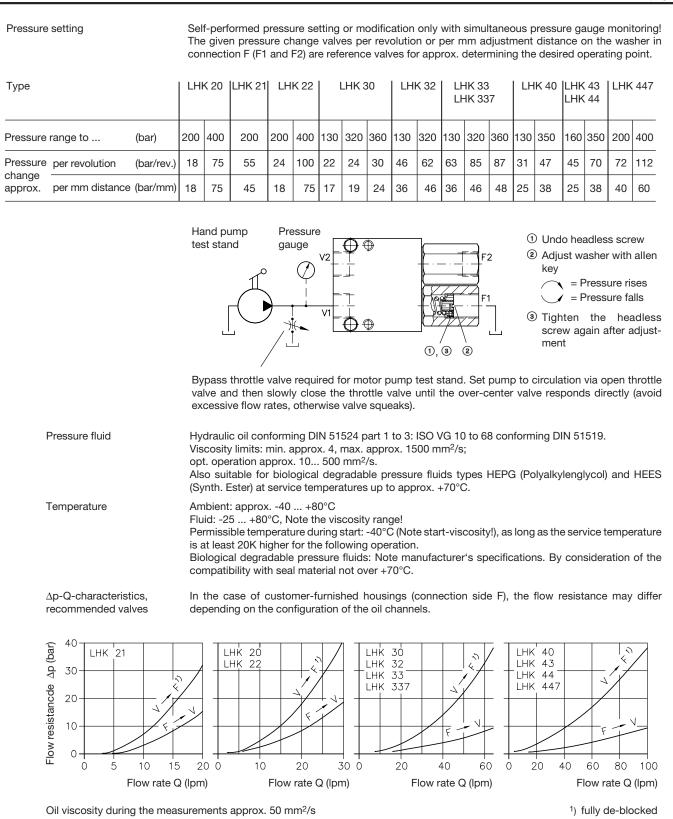

#### **Functional restriction:**

Load-holding valves cannot be used in conjunction with directional spool valves which show the flow diagram of the differential circuit in any operating position, e.g. with code letter C, Y in accordance with D 5650/1 or D 5700. The over-center valves with symbol -15 should not be connected to the rod side of the cylinder. Only exception are symbols -11C and -15C with external control piston relief (port Z).





#### 4. **Dimensions**

All dimensions are in mm, subject to change without notice!

#### 4.1 Valves for single-sided load direction $V \rightarrow F$

Dimensional drawings 1: Type LHK ... - 11 - ... LHK ... - 11 C - ...

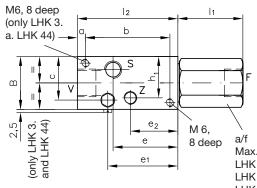

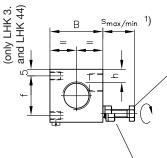

Max. torque LHK 22: 30 Nm LHK 3.: 160 Nm LHK 44: 180 Nm

#### Attention:

The hexagonal spring housing must be countered while installing the pipe fitting!

#### Attention:

If necessary, include the following instructions with diagram in the operating manual or operating instructions of the system:

Throttle screw a/f 3 (LHK 22) resp. a/f 10 (LHK 3., LHK 44) for valve damping. Throttle effect increases (clockwise rotation)

#### Caution:

Do not turn the throttle screw beyond the maximum measurement shown in the dimensional drawings. It cannot be structurally safeguarded inside the units.

Before adjusting the throttle screw, loosen the locknut a/f 10 (seal locknut) sufficiently so that the vulcanized - on sealing ring is not damaged by the thread!

1) Omitted with dampening version "U"


												Mass							
		ts (BSP	P)							1							s	; I	(weight)
Туре	V, F	S	Z	В	l <sub>1</sub>	l <sub>2</sub>	а	b	С	е	e <sub>1</sub>	e <sub>2</sub>	f	h	h <sub>1</sub>	a/f	min	max	approx. kg
LHK 22(7) - 11	G 3/8	G 1/8		32	40	57	-		25	35	35			8		22	8	17	0.5
LHK 32 - 11	G 3/8	G 1/4		40	49	74	5	64	33	49	53		30	10		30	14	24	1.0
LHK 33(7) - 11	G 1/2	G 1/4		40	49	76	5	64	33	49	53		30	10		30	14	24	1.0
LHK 33(7) - 11 C	G 1/2	G 1/4	G 1/8	40	49	76	5	64	33	49	53	37	30	10	31	30	14	24	1.0
LHK 44(7) - 11	G 3/4	G 1/4		45	90	80	6	70	39.5	51.5	55		35	21		36	14	24	1.6
LHK 44(7) - 11 C	G 3/4	G 1/4	G 1/8	45	90	80	6	70	39.5	51.5	55	38	35	21	36	36	14	24	1.6

Т

b2

/mir

#### Dimensional drawings 2: Type LHK ... - ... H LHK ... - ... H16

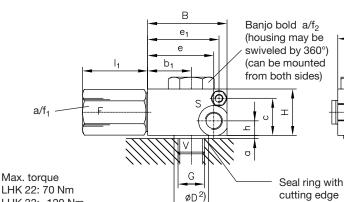

LHK 22: 70 Nm LHK 33: 120 Nm


#### Attention:

The hexagonal spring housing must be countered while installing the pipe fitting!


2) Both, the seal ring with cutting edge and the spot face show the same diameter.


	Po	rts (BSF	PP)																		
Туре	F	S	Z	ØD	G	В	Н	T	I <sub>1</sub>	а	b <sub>1</sub>	b <sub>2</sub>	с	е	e <sub>1</sub>	e <sub>2</sub>	e <sub>3</sub>	f	h	h <sub>1</sub>	h <sub>2</sub>
LHK 22H	G 3/8	G 1/4		24	G 3/8 A	40	25	60	40	4.5	26	46	13	10	35			30	12.5		
LHK 22H16	G 3/8	G 1/4		24	M16x1.5	40	25	60	40	4.5	26	46	13	10	35			30	12.5		
LHK 33H	G 1/2	G 1/4	G 1/4	29	G 1/2 A	60	35	60	52	2.4	33	42.5	28	50	54	14	49	23	11	17.5	22

Туре	a/f <sub>1</sub>	a/f <sub>2</sub>	min	s   max	Mass (weight) approx. kg	Seal ring with cutting edge
LHK 22H	22	27	8	17	0.6	ERMETO DKA 3/8
LHK 22H16	22	27	8	17	0.6	ERMETO DKA 3/8
LHK 33H	30	30	6	15	1.0	ERMETO DKA 1/2

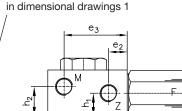



Throttle screw, see notes

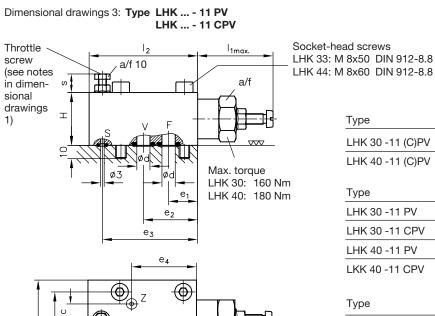

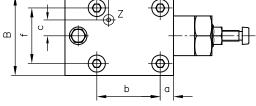

Dimensional drawings 4: Type LHK ... - 11 P Type LHK ... - 11 K

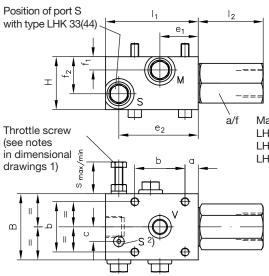

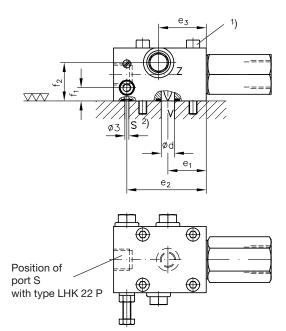

/	
Max. torc	lne
LHK 22:	30 Nm
LHK 33:	160 Nm
LHK 44:	180 Nm

#### Attention:

The hexagonal spring housing must be countered while installing the pipe fitting!

Туре	Ports F S			1	VI, Z	-	O-rings NBR 90 Shore at ports F and V   S and Z						
		-	0		101, 2								
LHK 22	G 3/8		G 3/8				10.7	7 x 2	2.62				
LHK 33 (333, 337)	G 1/	2	G 1/4	+   C	G 1/	/4	12.3	7 x 2	2.62	4.47	x 1.78	3	
LHK 44	G 3/	4		-	-		15.5	5 x 2	2.62	4.47	x 1.78	3	
Туре	В	Н	I <sub>1</sub>	I <sub>2</sub>		а	b	с	Ød	e <sub>1</sub>	e <sub>2</sub>	e <sub>3</sub>	
LHK 22	40	28	70	40	)	9.5	28		8	23.5			
LHK 33 (333, 337)	50	40	70	49	)	10	38	11	10	29	60	36	
LHK 44	60	48	90	60	)	18	28	0	14	33	54.5		
	I	I	I				s	1	Mass	(weig	ht)		
Туре	f <sub>1</sub>	f2	a	/f	mi		max			ox. kg	iii)		
LHK 22	14		22		8	3	15		0.6				
LHK 33 (333, 337)	10	28	28 30		1	4	24		1.0				
LHK 44	12		36		12		24 2.0						

Туре	F	and V	S	and Z	В		Н	I <sub>1</sub>	l <sub>2</sub>
LHK 30 -11 (C)PV	12.37	x 2.6	2 4.4	7 x 1.7	8 60		40	57	82
LHK 40 -11 (C)PV	17.12	x 2.6	2 4.4	7 x 1.7	8 62		50	85	80
Туре	а	b	с	Ød	e1		e <sub>2</sub>	2	e <sub>3</sub>
LHK 30 -11 PV	10	48		10	22		41	1	72
LHK 30 -11 CPV	10	48	12	10	22		41	1	72
LHK 40 -11 PV	17	50		14	28.	5	52	2.5	74
LKK 40 -11 CPV	17	50	15	14	28.	5	52	2.5	74
Туре	e <sub>4</sub>	f	a/f	s min	max			s (w rox.	eight.) kg
LHK 30 -11 PV		42	30	14	24		1	.5	
LHK 30 -11 CPV	49	42	30	14	24		1	.5	
LHK 40 -11 PV		48	36	12	24		1	.8	
LKK 40 -11 CPV	60	48	36	12	24		1	.8	

O-rings NBR 90 Shore


at ports

 Socket-head screws
 LHK 22: M 6x35 DIN 912-8.8 thread depth 8 mm

 LHK 33: M 6x50 DIN 912-8.8 thread depth 11 mm
 LHK 44: M 8x60 DIN 912-8.8 thread depth 14 mm
 Port S on flange side


 Port S on flange side only with type LHK 33 (333, 337) .. - 11 K


Ports G... = (BSPP)

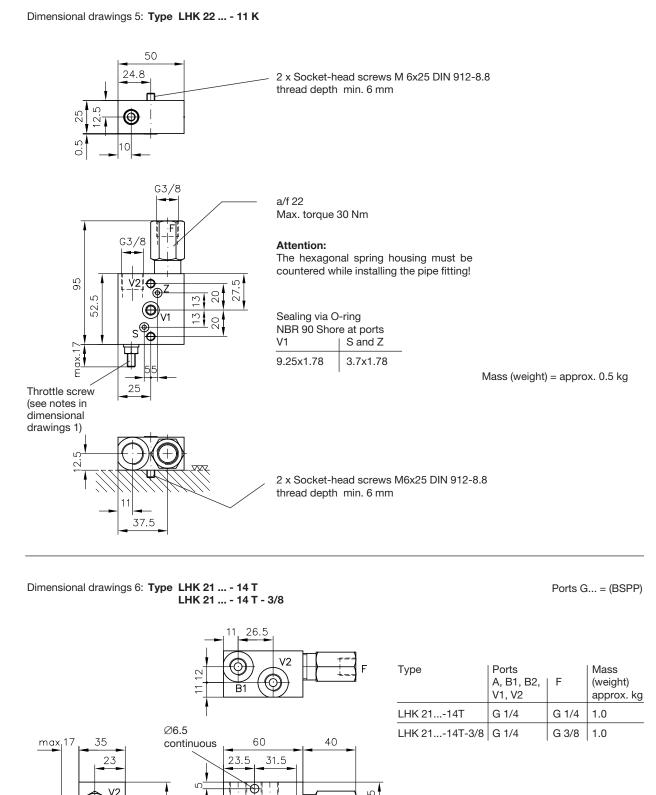




26 60

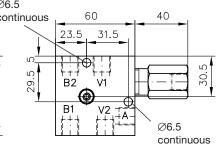


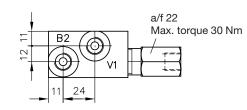


Attention:

The hexagonal spring housing must be countered while installing the pipe fitting!

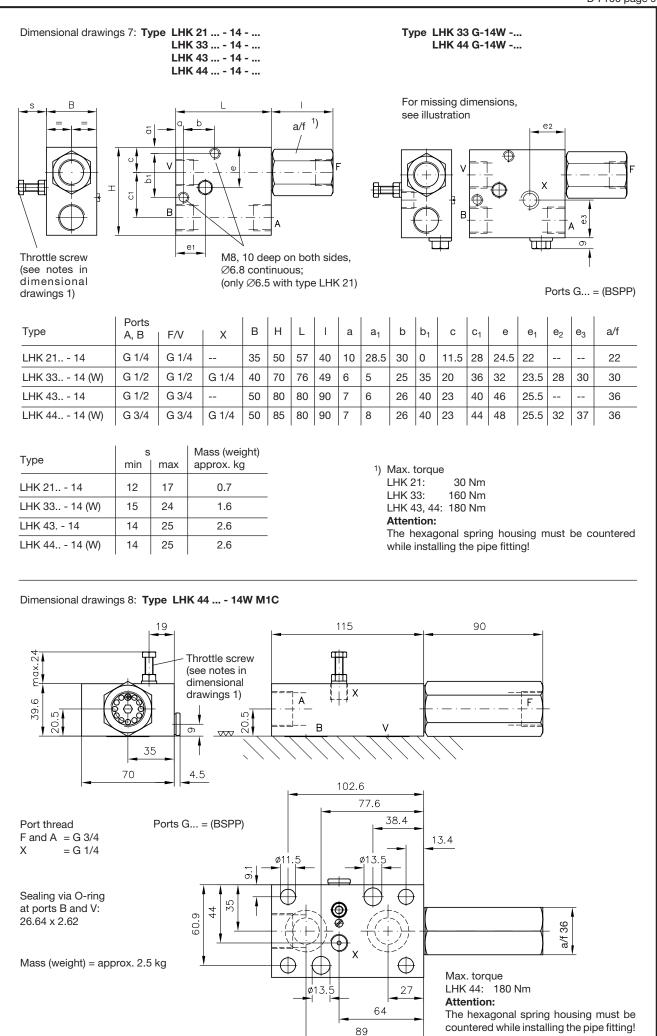


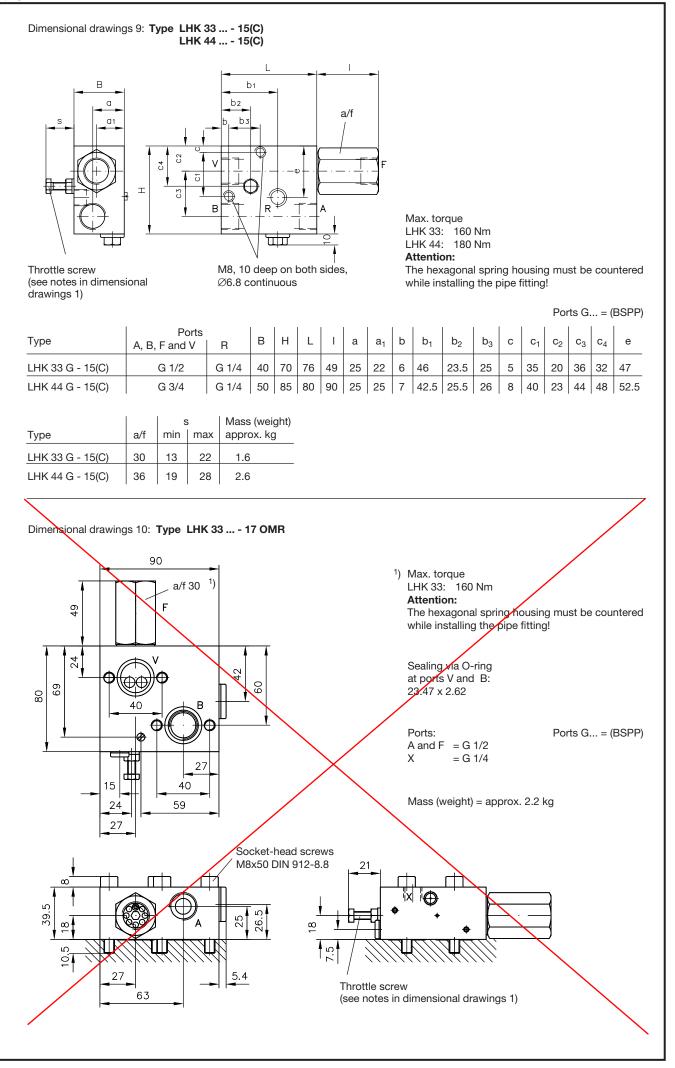

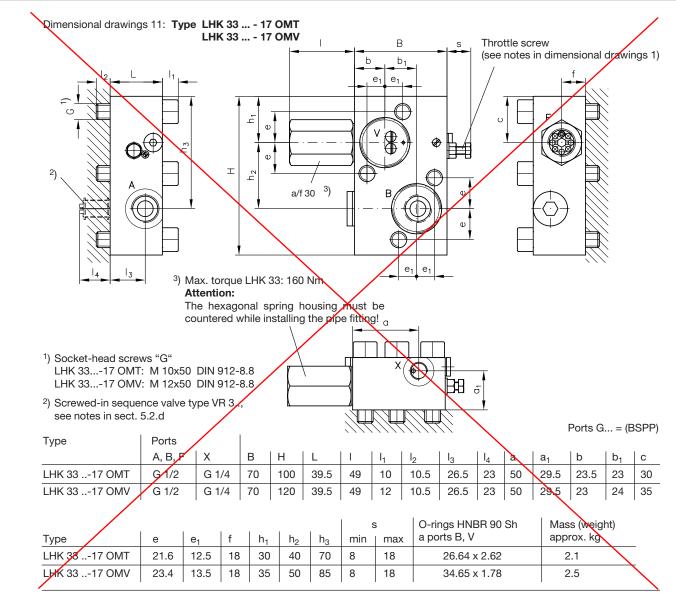


### 4.2 Valve for alternating load directions

Dimensional drawings 12: Type LHK 22 ... - 21 - ... LHK 33 ... - 21 - ...

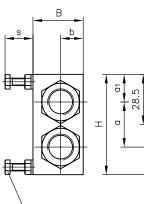


Throttle screw (see notes in dimensional drawings 1)

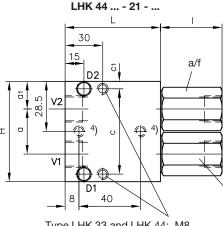

Type LHK 33 and LHK 44: M8, 10 deep on both sides, Core hole  $\varnothing$ 6.8, continuous in the case of LHK 33

Type LHK 33 ... - 21W - ... LHK 44 ... - 21W - ...

4) LHK 22: M6, 8 deep

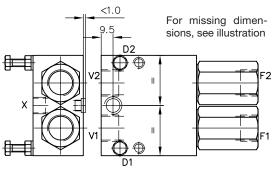

Attention:

The hexagonal spring housing must be countered while installing the pipe fitting!

Ports G... = (BSPP)

Туре	Ports F1, F2, V1, V2	X	в	н	L	I	а	a <sub>1</sub>	b	с	c <sub>1</sub>	a/f	min	s   max	Mass (weight)
LHK 22 21	G 3/8		30	60	58	40	28	16	14	48	6	22	12	19	0.85 kg
LHK 33 21(W)	G 1/2	G 1/4	40	80	76	49	36	22	18	68	6	30	15	25	2.4 kg
LHK 44 21(W)	G 3/4	G 1/4	50	90	80	90	44	23	25	75	7.5	36	14	25	3.5 kg

F2

Max. torque

30 Nm


160 Nm

180 Nm


LHK 22:


LHK 33:

LHK 44:

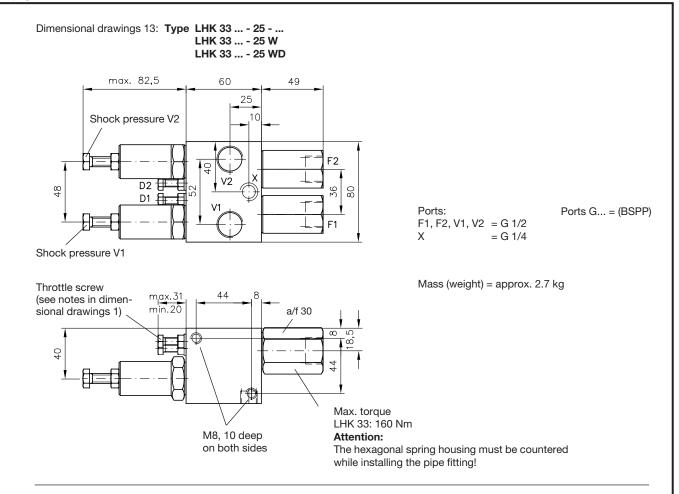


#### 4.3 Assembly kits - Dimensions and required mounting hole

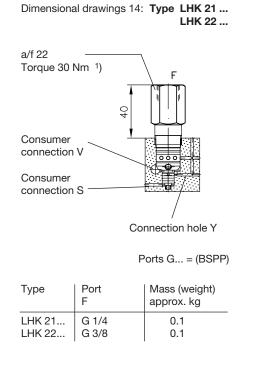


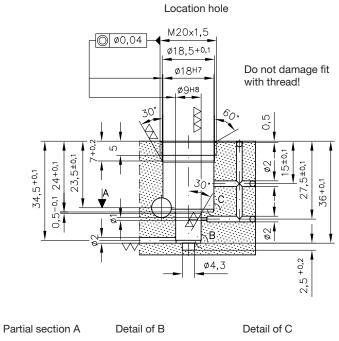



#### <sup>1</sup>) Attention:


The hexagonal spring housing must be countered while installing the pipe fitting!

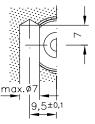

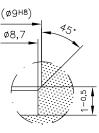

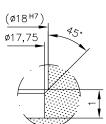

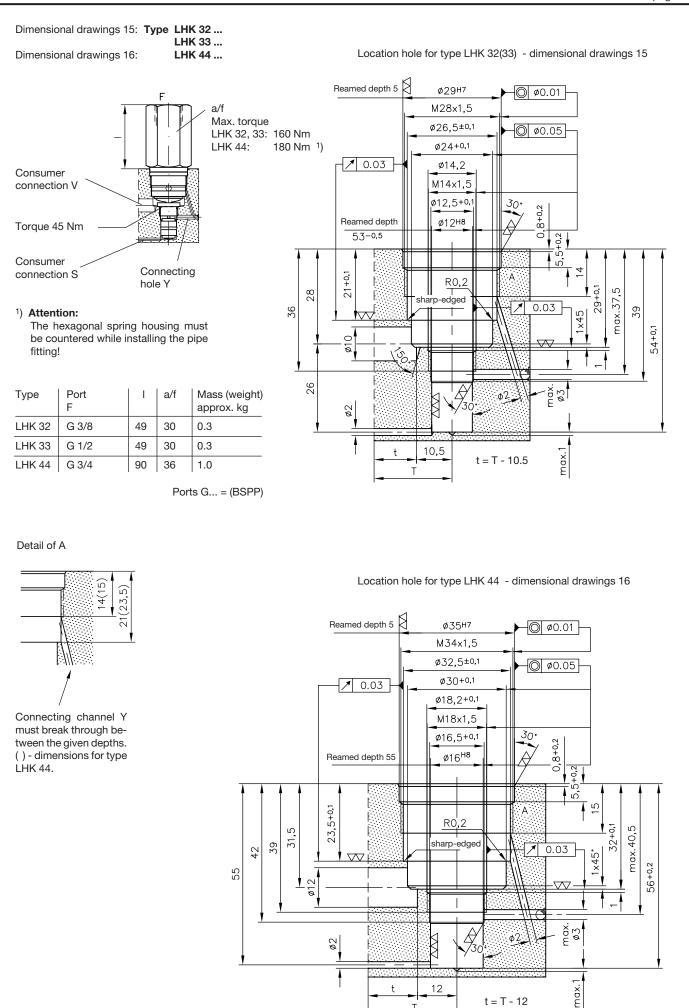


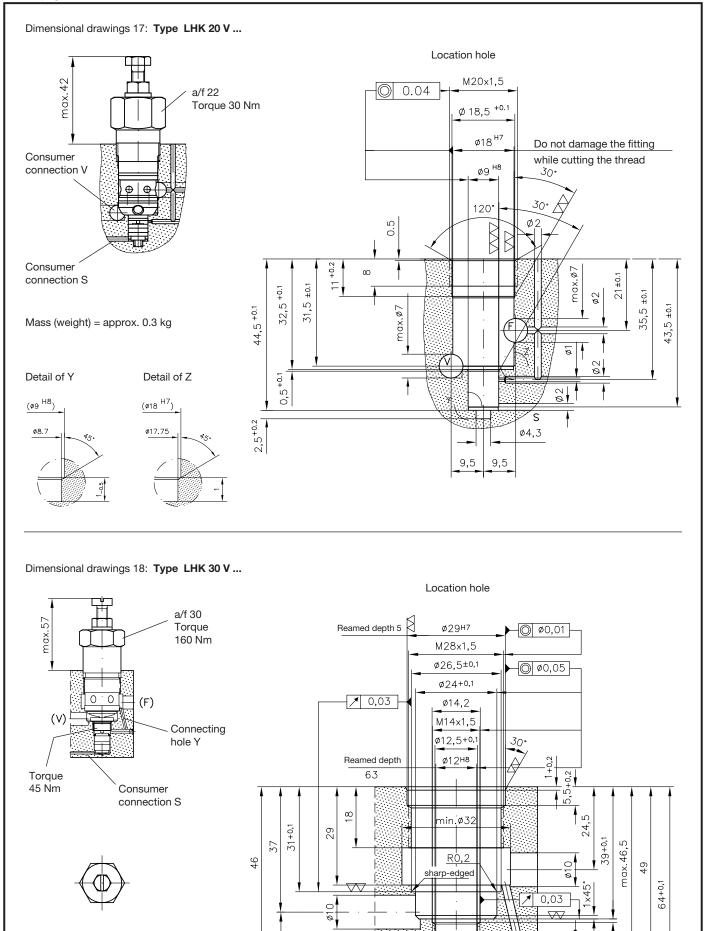


Mass (weight) = approx. 1.0 kg

max. ø3

> × E

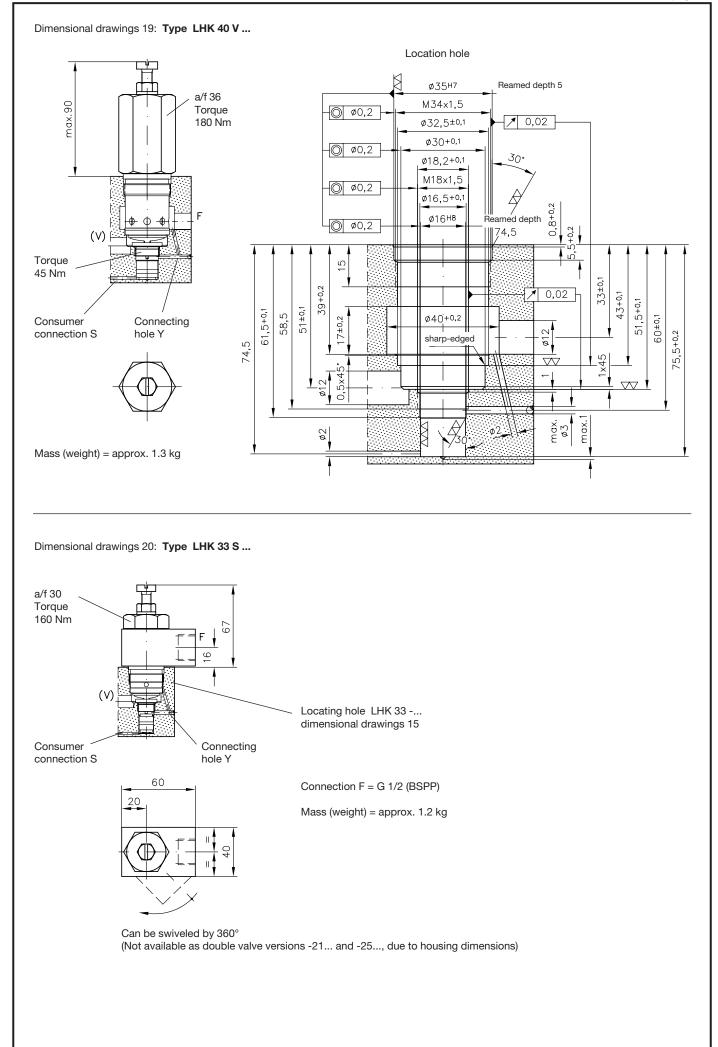

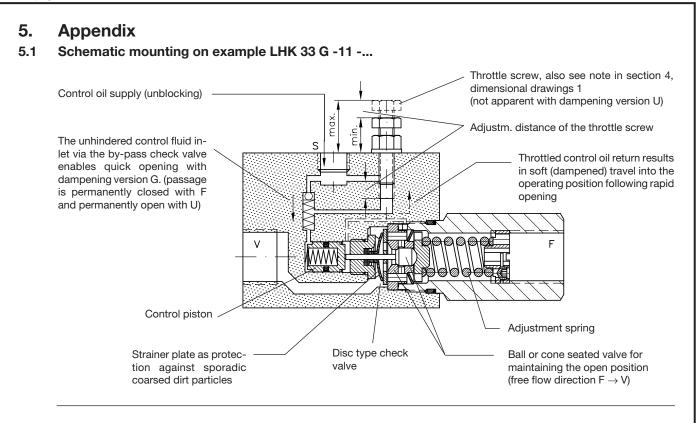

#### 5.2 Brief description of the symbols

#### a) Symbols -11, -11C

The relief of the valve is carried out via the external control line S from the pump sided consumer line.

The rear side of the control piston is connected with port F with version -11, i.e. the return pressure (back pressure from the directional valve to the tank) influences the relief characteristic of the valve. This is also the reason for the functional restrictions with differential circuits (see sect. 3).

The rear side of the control piston of symbol -11C is routed externally (depressurized) via port Z to the tank, which eliminates any influence of the return pressure. This ensures sure closing function of version -11C. It is therefore suited for differential circuits as well as for use together with directional spool valves with blocked flow in yidle position).

#### b) Symbols -14, -14W, -14W M1C

The pick-up of the control line is here internal as the consumer line (A - B) is routed here through the valve (different to symbol -11), which minimizes the effort for piping.

Symbol -14W features an additional shuttle valve for the brake control line (port X) e.g. for hydraulically disengaged brake (winches etc.).

Version -14W M1C can be mounted directly onto DENISON motors (e.g. type M1C) or VOAC motors (e.g., type F 12).

#### c) Symbols -15, -15C

The consumer side is safe guarded by an additional shock valve. This enables a functional separation of max. load pressure function (set at the shock valve) and the relief ratio (dep. on relief ratio and the pressure setting at the valve)

#### d) Symbols 17 OMR, -17 OMT, -17 OMV

These versions are intended for direct mounting onto DANFOSS motors type OMR, OMT, and OMV or other brands with the same hole pattern.

An additional sequence valve (type VR 33 acc. to D 7340, pre-load approx. 3 bar) may be installed optionally at port B. This prevents running of the winch motor without load (no loose hanging of the rope).

#### e) Symbols -21, -21W


Valve for alternating load directions (i.e. going over a dead center). Both directions may be adjusted independently (load pressure and dampening characteristic). Versions -21W features an additional shuttle valve (see notes for symbol -14W, in sect. 5.2 b).

#### f) Symbols -25, -25W, -25WD

Versions for turning, swiveling or rotating devices via hydraulic motors. A shuttle valve may be integrated like with symbol -14W (sect. 5.2 b). Additional restrictor check valve for delayed relief of the hydraulic brake (smooth engaging) with symbol -25WD.

Examples of applied circuits Simplified, typical crane controller 5.3


#### 5.3.1

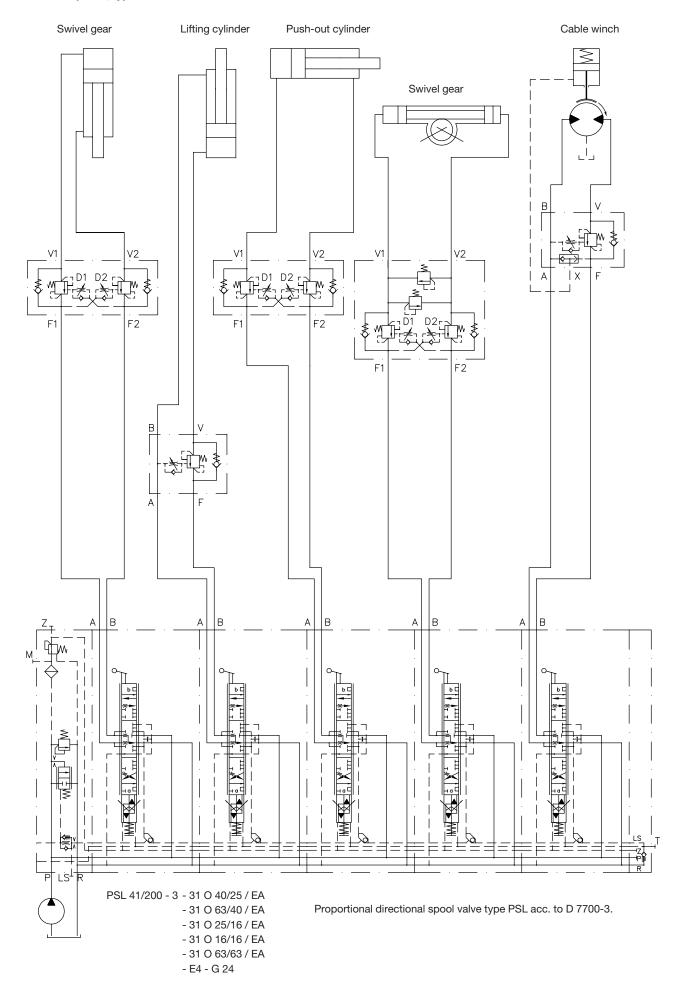

### 5.3.2 Synchronization system

#### Example circuit:

The load acts only in one direction. Lifting is synchronous by way of the two partial delivery flows of the pump. Lowering is against the load holding valve, synchronism being maintained by the "pushing" of the particular flows.

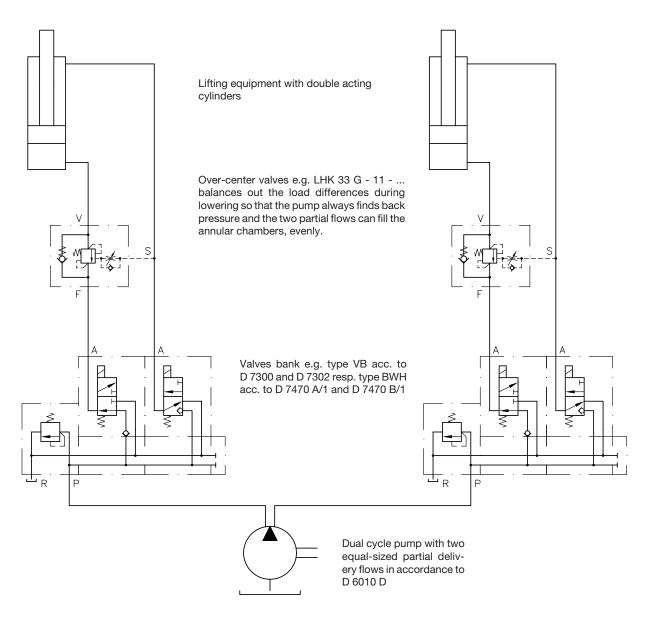

However, synchronization controllers of the type shown here are only appropriate if no great demands are placed on the precision and if synchronism interruptions to the two delivery flows (e.g. incorrect switching of a solenoid valve, pump element failure due to contamination etc.) are detected and if any inclination which occurs until the equipment is switched off does not lead to risks to the operating personnel and system. During an uninterrupted operation, the synchronism accuracy is also influenced by, amongst other things, the volume elasticity of the oil and of the lines (particularly in the case of hose lines = hose expansion) etc. depending on the load distribution. There is therefore basically no works guarantee on the synchronism function of such systems.

#### 5.4 Notes on directional spool valve controllers

If several directional spool valves are arranged in the hydraulic circuit (spool valves bank), leakage oil can seep out of the pressure loaded pump channel into the consumer outputs of non-operated spool valves when any desired consumer is operated. Pressure can gradually build up in the connected consumer lines ("leakage oil pressure") which is eventually sufficient to block the LHK valve so that the cylinder does, in fact, begin to creep. This means series-connected valves bank (e.g. type SKH acc. to D 7230) cannot be combined with load holding valves. In practice, only spool valves connected in parallel are normally used for such controllers. Here, any leakage oil pressure at the consumer connections of the individual spool valves is more or less pronounced and is mainly dependent on the tolerance of fit and the overlapping length. Also, since the leakage oil migrates to the return outlet, this pressure is in most cases no sufficient to unlock the load holding valve since this valve is set high. Also, it has become practice to install consumer connections with throttle relief or a direct connection to the return channel instead of completely blocked consumer connections in the neutral position. This is to ensure that leakage oil which has seeped in is immediately diverted and does not reach the control line of the holding valve, see the example of the crane circuit, section 5.3.1 with proportional directional spool valve type PSL acc. to D 7700 ++. At the same time, this does not hinder the closing movement of the load holding valve when the directional spool valve is quickly reset to the neutral position, because the oil from the control chamber does not have to be forced back against the valve leakage gap.

## 5.5 Old and new type coding

Some changes were necessary for the unification of the type coding. The table below lists all these changes.

Old	Previous SK-drawing	New (like in sect. 2.1)
LHK 22 K-11	Sk 7660 GP/3	LHK 22 G -11 K
LHK 30 GVP-11	Sk 7100 GVP-11	LHK 30 G -11 PV
LHK 30 FVP-11	Sk 7100 GVP-11	LHK 30 F -11 PV
LHK 30 GVP-11C	Sk 7100 GVP-11C	LHK 30 G -11C PV
LHK 30 FVP-11C	Sk 7100 GVP-11C	LHK 30 F -11C PV
LHK 33 OMR-17	Sk 7547 OMR	LHK 33 G - 17 OMR
LHK 33 OMT-17	Sk 7547 OMT	LHK 33 G -17 OMT
LHK 33 OMV-17	Sk 7547 OMV	LHK 33 G - <del>17 OMV</del>
LHK 33 K-10 G(F) LHK 33 K-11 G(F)	Sk 7100 K Sk 7100 K	LHK 333 G(F) - 11 K LHK 33 G(F) - 11 K
LHK 33 K-12 G(F)	Sk 7100 K	LHK 337 G(F) - 11 K
LHK 33 P-11	Sk 7100 P-11	LHK 33 G -11P
LHK 33 PF-11	Sk 7100 P-11	LHK 33 F -11P
LHK 33 P-12	Sk 7100 P-11	LHK 337 G -11P
LHK 33 PF-12	Sk 7100 P-11	LHK 337 F -11P
LHK 40 GVP-11	Sk 7101 GVP-11	LHK 40 G -11PV
LHK 40 FVP-11	Sk 7101 GVP-11	LHK 40 F -11PV
LHK 40 GVP-11C	Sk 7101 GVP-11C	LHK 40 G -11C PV
LHK 40 FVP-11C	Sk 7101 GVP-11C	LHK 40 F -11C PV
LHK 44 G M1C-14W	Sk 7101 M1C-14W/1	LHK 44 G - 14W M1C
LHK 44 P-11	Sk 7101 P-11	LHK 44 G -11 P